

Set Point and Wiring Instructions



Electronic controllers for standard shelf and remote coolers used with water bath are preset to -2.0°C , with an adjustable range from -10°C to $+15^{\circ}\text{C}$. In addition to this, the default set point for standard PTC (Python Temperature Control) units is $+10.0^{\circ}\text{C}$, with an adjustable range from $+5^{\circ}\text{C}$ to $+15^{\circ}\text{C}$. Users can adjust the set point within the specified range to suit their application needs.

Please follow the below steps to change the set point.

ADJUSTING SET POINT



- Push the SET key for more than 2 seconds to change the Set point value.
- The value of the set point will be displayed and the “°C” LED will start flashing.
- Push the up or down arrows within 10 seconds to change the Set value.
- Push the SET key again or wait 10 seconds to save the new set point value.

CHECKING SET POINT

- Push and immediately release the SET key, the set point will be displayed.
- Push and immediately release the SET key or wait for 5 seconds to return to normal display.

CONTROLLER WIRING DIAGRAM



Only authorized personnel should work on electrical devices to ensure safety and compliance with applicable regulations.

